


# LEWA process diaphragm pumps

LEWA triplex<sup>®</sup> and LEWA ecoflow<sup>®</sup>  
for process engineering.

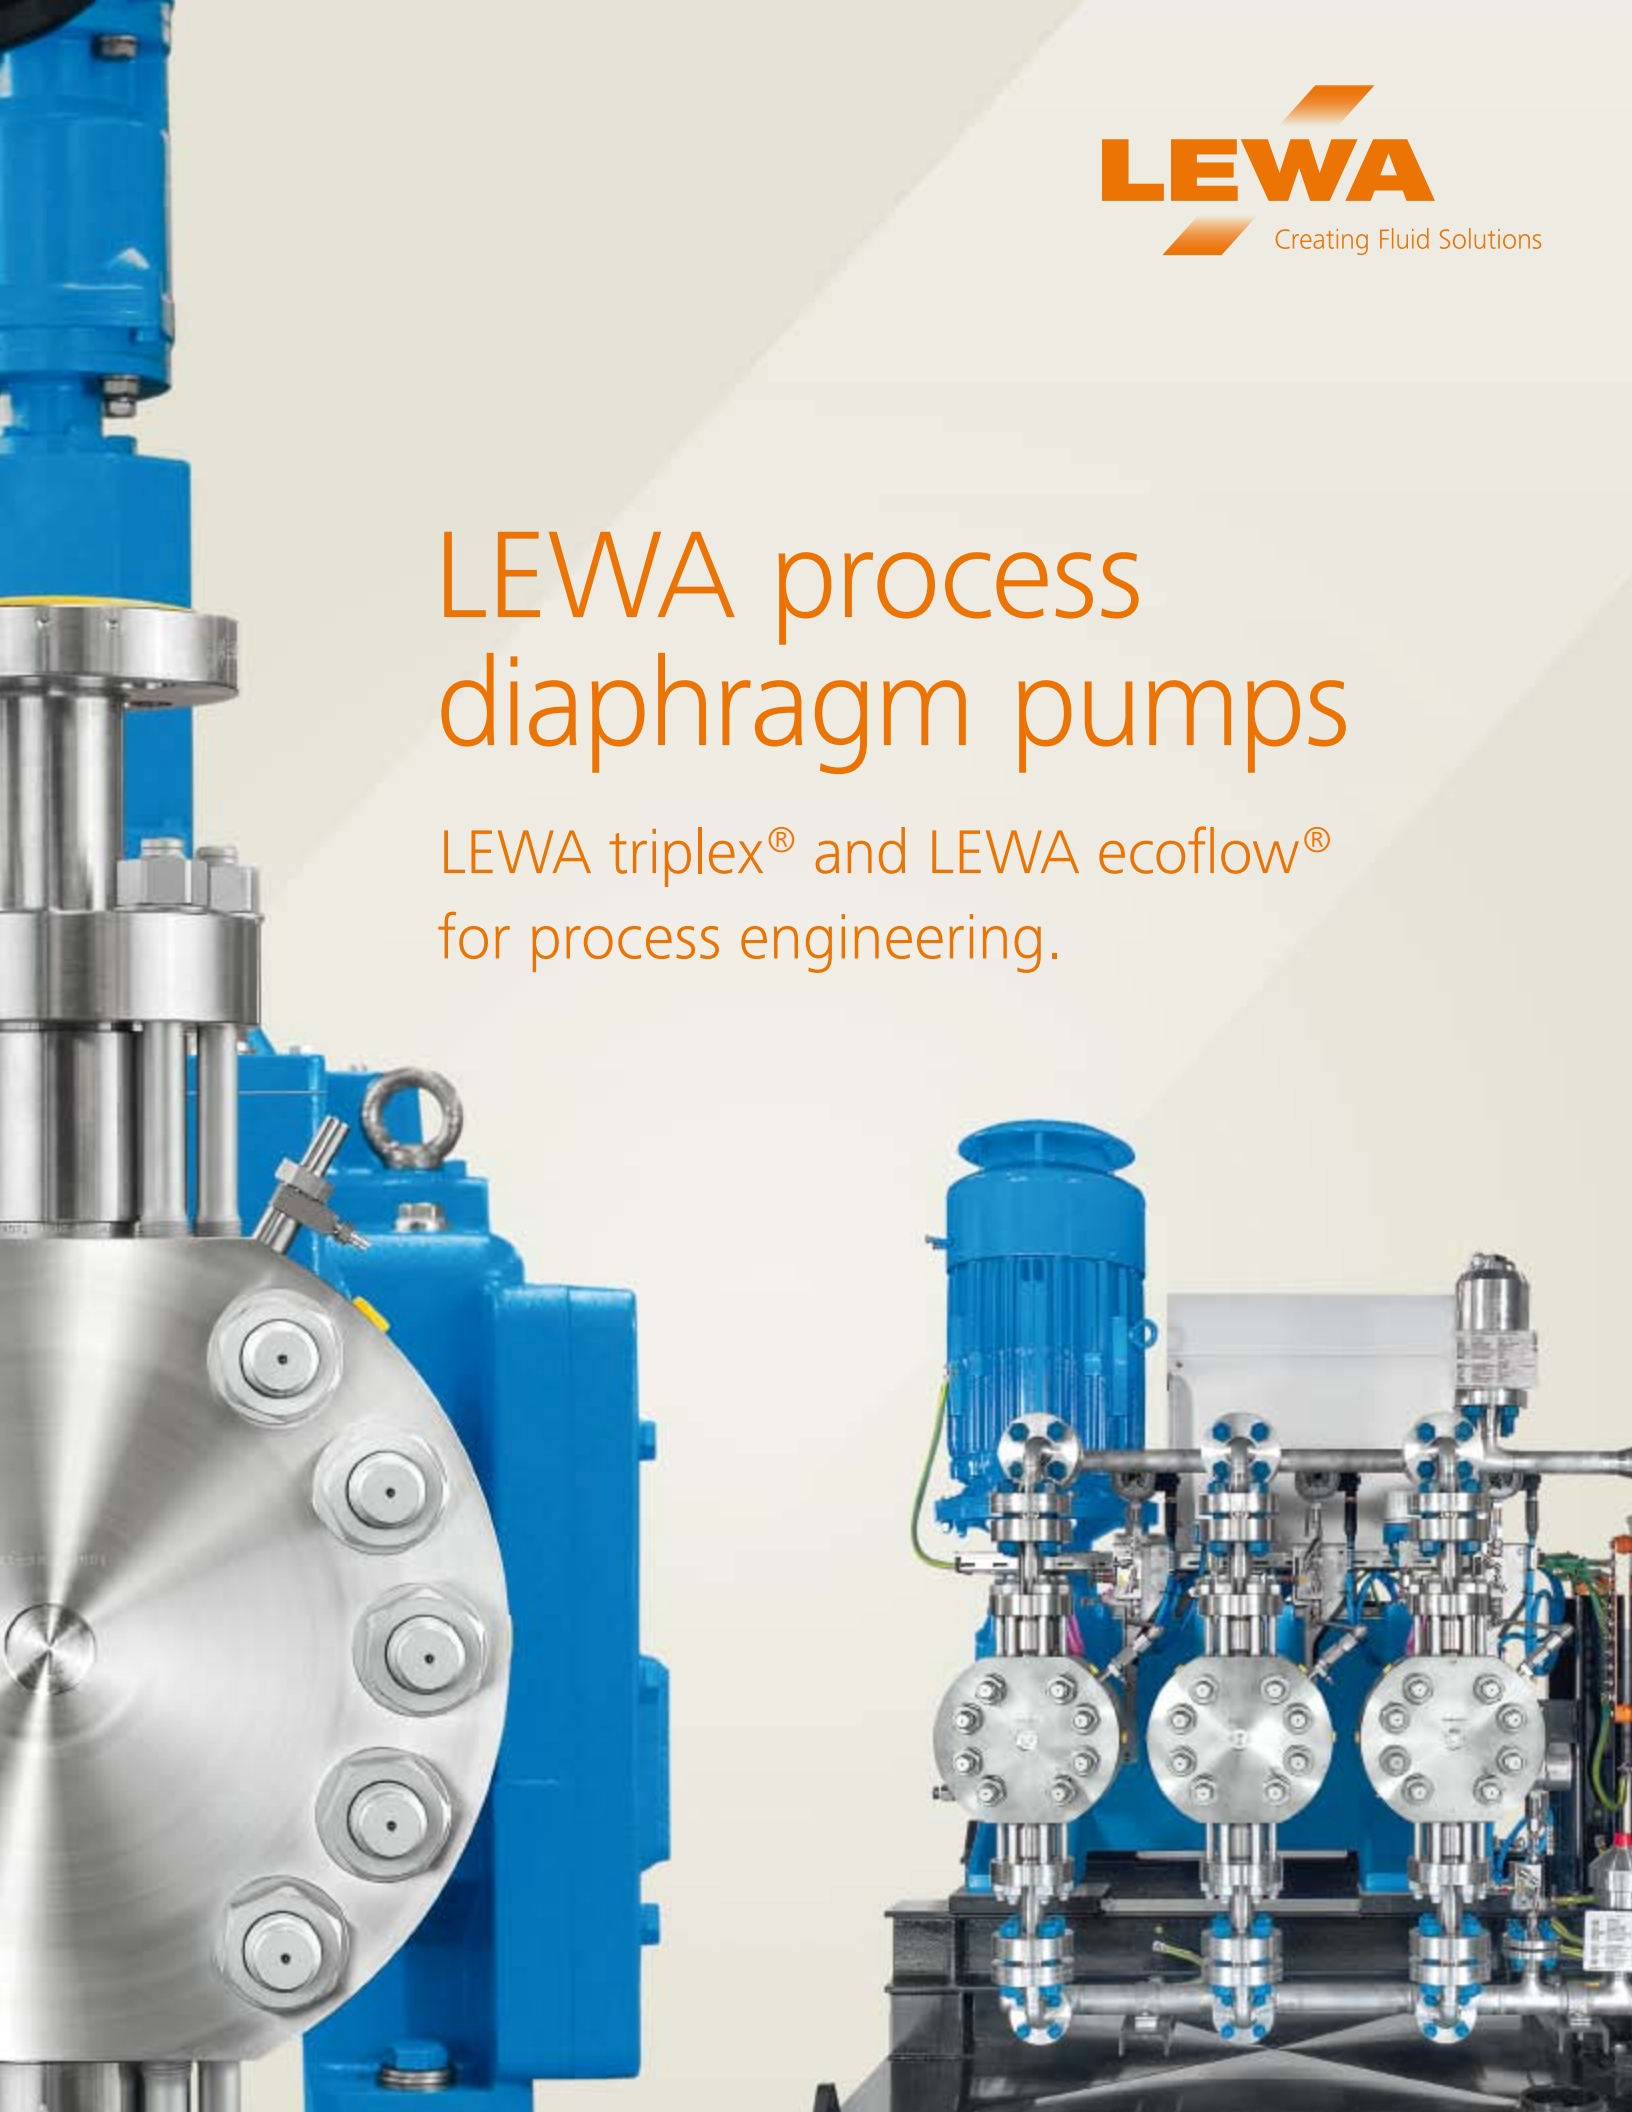

**Industry:** Oil & Gas


**Installation location:** Saudi Arabia

**Application:** MEG injection, flow rate of 1,189 gph at a pressure of 7,759 psig (API10000 design)

**LEWA solution:**

- Quintuplex process diaphragm pump in modular design
- Space-saving M800-PTFE pump heads
- Pump heads and piping made of super duplex SS material (API10000)





LEWA triplex and LEWA ecoflow process diaphragm pumps set the standard for process engineering, allowing even critical, toxic, or flammable fluids to be conveyed safely.

These pumps are also able to handle extremely low-viscosity, non-lubricating fluids, and abrasive suspensions without any problems, and feature a pressure range up to 17,400 psig. LEWA's ongoing development of diaphragm pump technology ensures that it keeps on setting benchmarks.

Reliable components are one of the keys to safe processes. LEWA process diaphragm pumps are based on the robust technology that LEWA is renowned for. As a result, they are also easily able to fulfill the strict safety requirements of API 675 (American Petroleum Institute). The pumps use key components from LEWA's proven range – like the PTFE sandwich diaphragm with diaphragm monitoring, the patented DPS diaphragm protection system and flow efficient check valves.

- LEWA triplex is the world's most compact process diaphragm pump in any branch of industry. Its space and weight saving monoblock design also makes it suitable for any application with very little installation space.
- LEWA ecoflow is the most advanced process diaphragm pump in the world, offering maximum safety for production and the environment. The perfect solution for your application requirements can be configured from a wide variety of standardized assemblies. LEWA combines various pump heads and drive units with a variable modular construction, in line and boxer designs.





**Industry:** Refineries

**Installation location:** Germany


**Application:** Conveying methanol,  
flow rate of 2,510 gph at a pressure of 638 psig

**LEWA solution:**

- Hermetically tight process diaphragm pump for conveying poisonous, highly flammable fluids
- Compact design
- Designed for continuous operation

# LEWA process diaphragm pumps. The advantages at a glance.

1

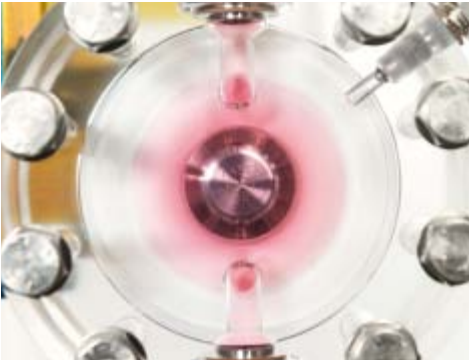

## Hermetically tight

Diaphragm pumps work without dynamic seals, due to their design. This permits a hermetically tight working area. There are no external emissions and contamination of the fluid is impossible.

2



## Maximum operational safety

Secure against misuse and against impermissible operating states, resulting in outstanding system availability. A monitoring system indicates possible diaphragm damage immediately. The pump can still be operated for a limited time.

3



## Compact design

Thanks to the extremely space-saving and weight-saving monoblock design of the LEWA triplex, these process pumps are also ideal for applications with very little installation space.

4



## Custom-made solutions

The modular system permits a wide variety of solution options – from the flexible modular construction, to the space-saving monoblock design, all the way through to special solutions. LEWA specializes in demanding applications.

5



## Lowest life cycle costs

LEWA develops pumps for long service life. The assemblies run for decades in continuous operation. Our pumps achieve the highest efficiency of any pump technology.

6



## Worldwide service

LEWA is globally organized. Spare parts and service are quickly available worldwide.



## References from customized process diaphragm pumps



**Industry:** Chemicals


**Installation location:** China

**Application:** Conveying vinyl acetate,  
flow rate of 2,378 gph at a pressure of 4,490 psig

**LEWA solution:**

- LEWA process diaphragm pump in boxer design
- Hermetically tight diaphragm pump heads
- Extremely wide control range



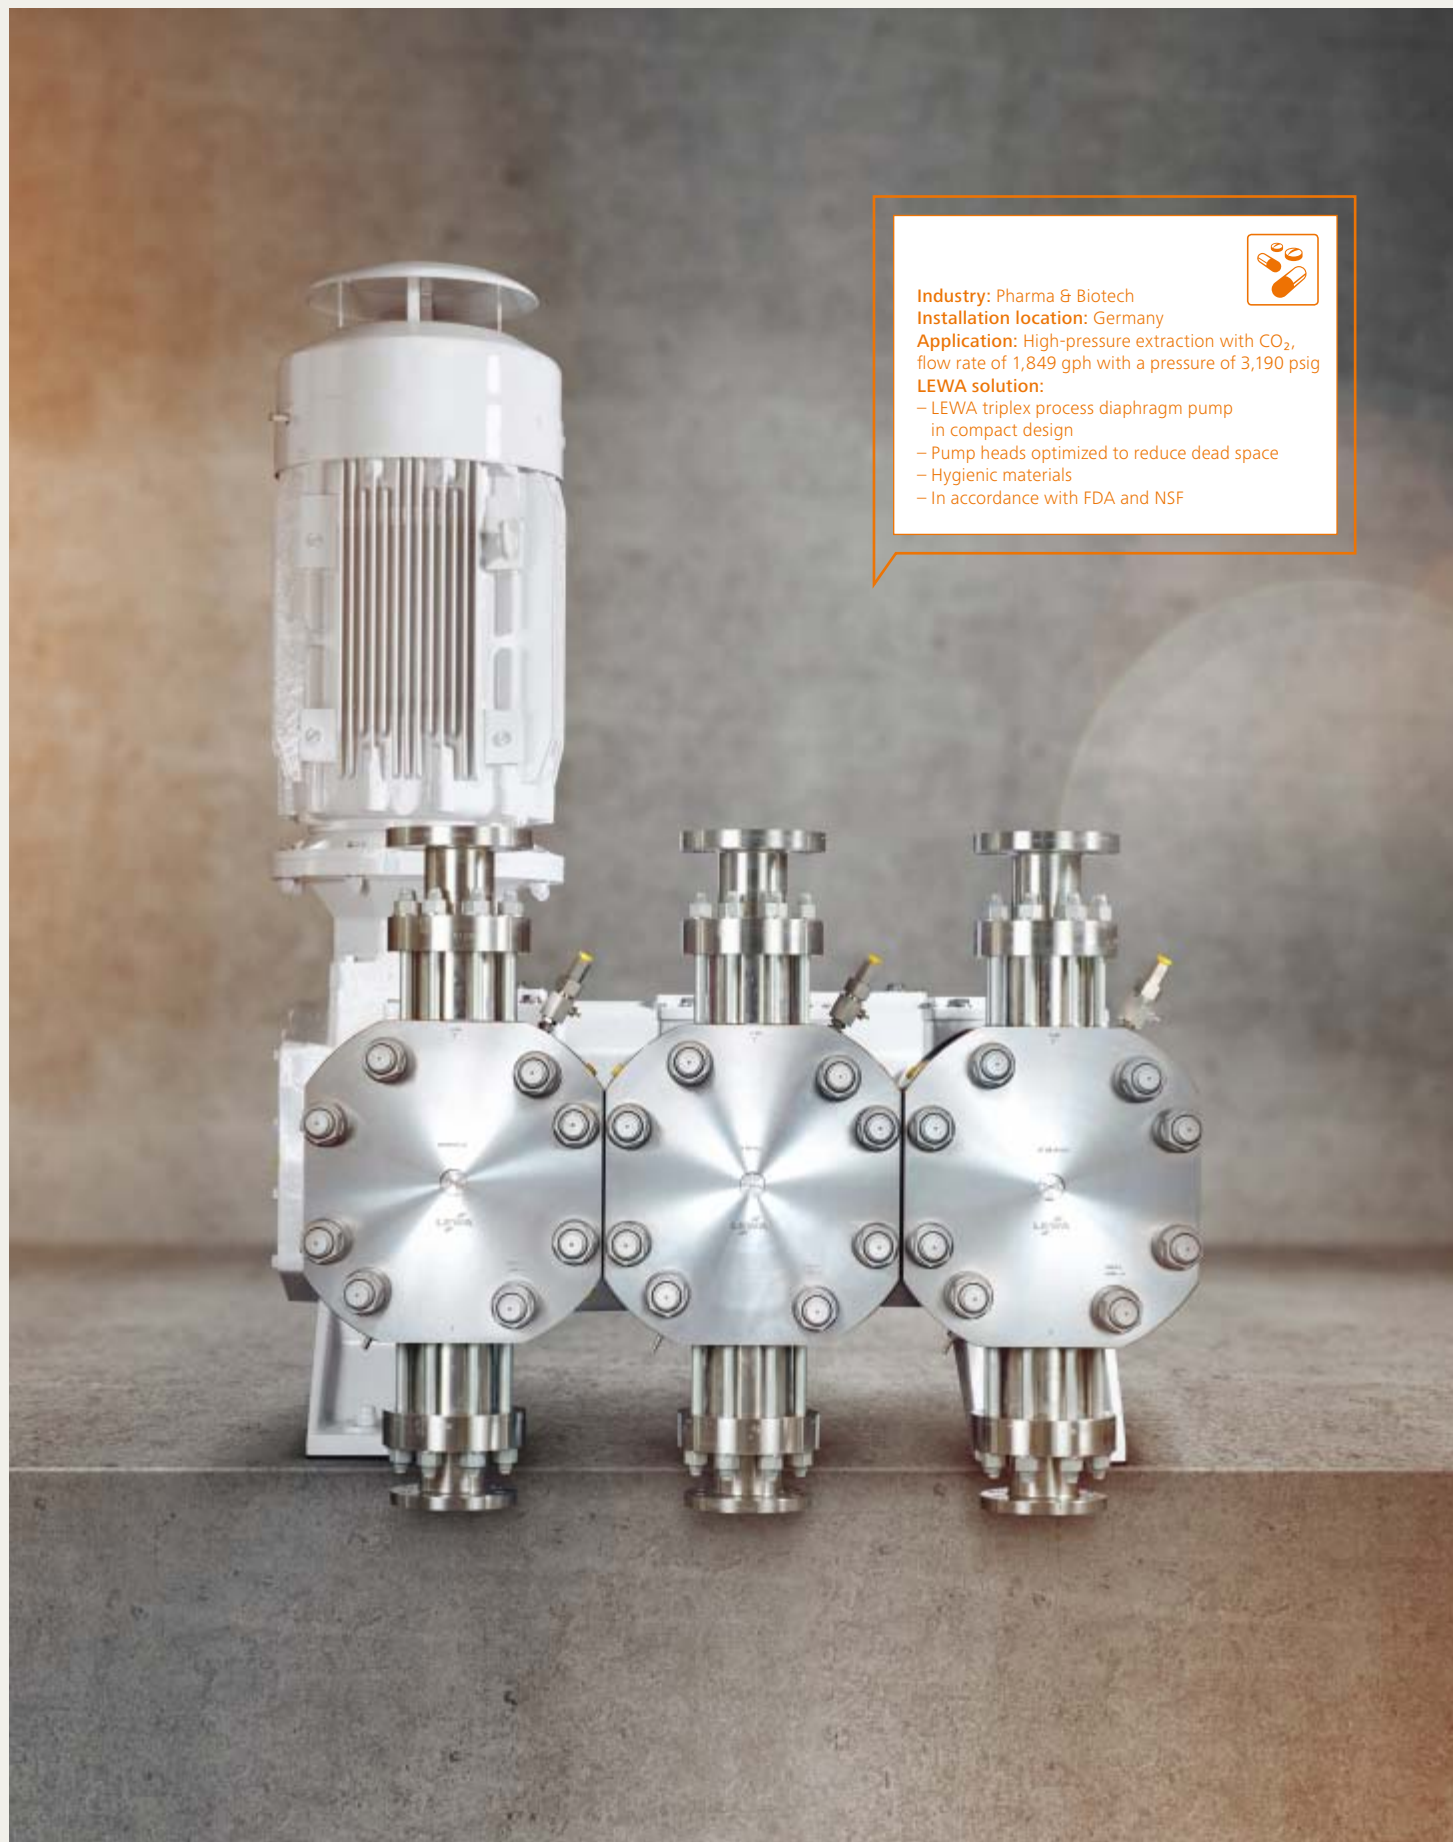

**Industry:** Pharma & Biotech


**Installation location:** Germany

**Application:** High-pressure extraction with CO<sub>2</sub>,  
flow rate of 1,849 gph with a pressure of 3,190 psig

**LEWA solution:**

- LEWA triplex process diaphragm pump in compact design
- Pump heads optimized to reduce dead space
- Hygienic materials
- In accordance with FDA and NSF



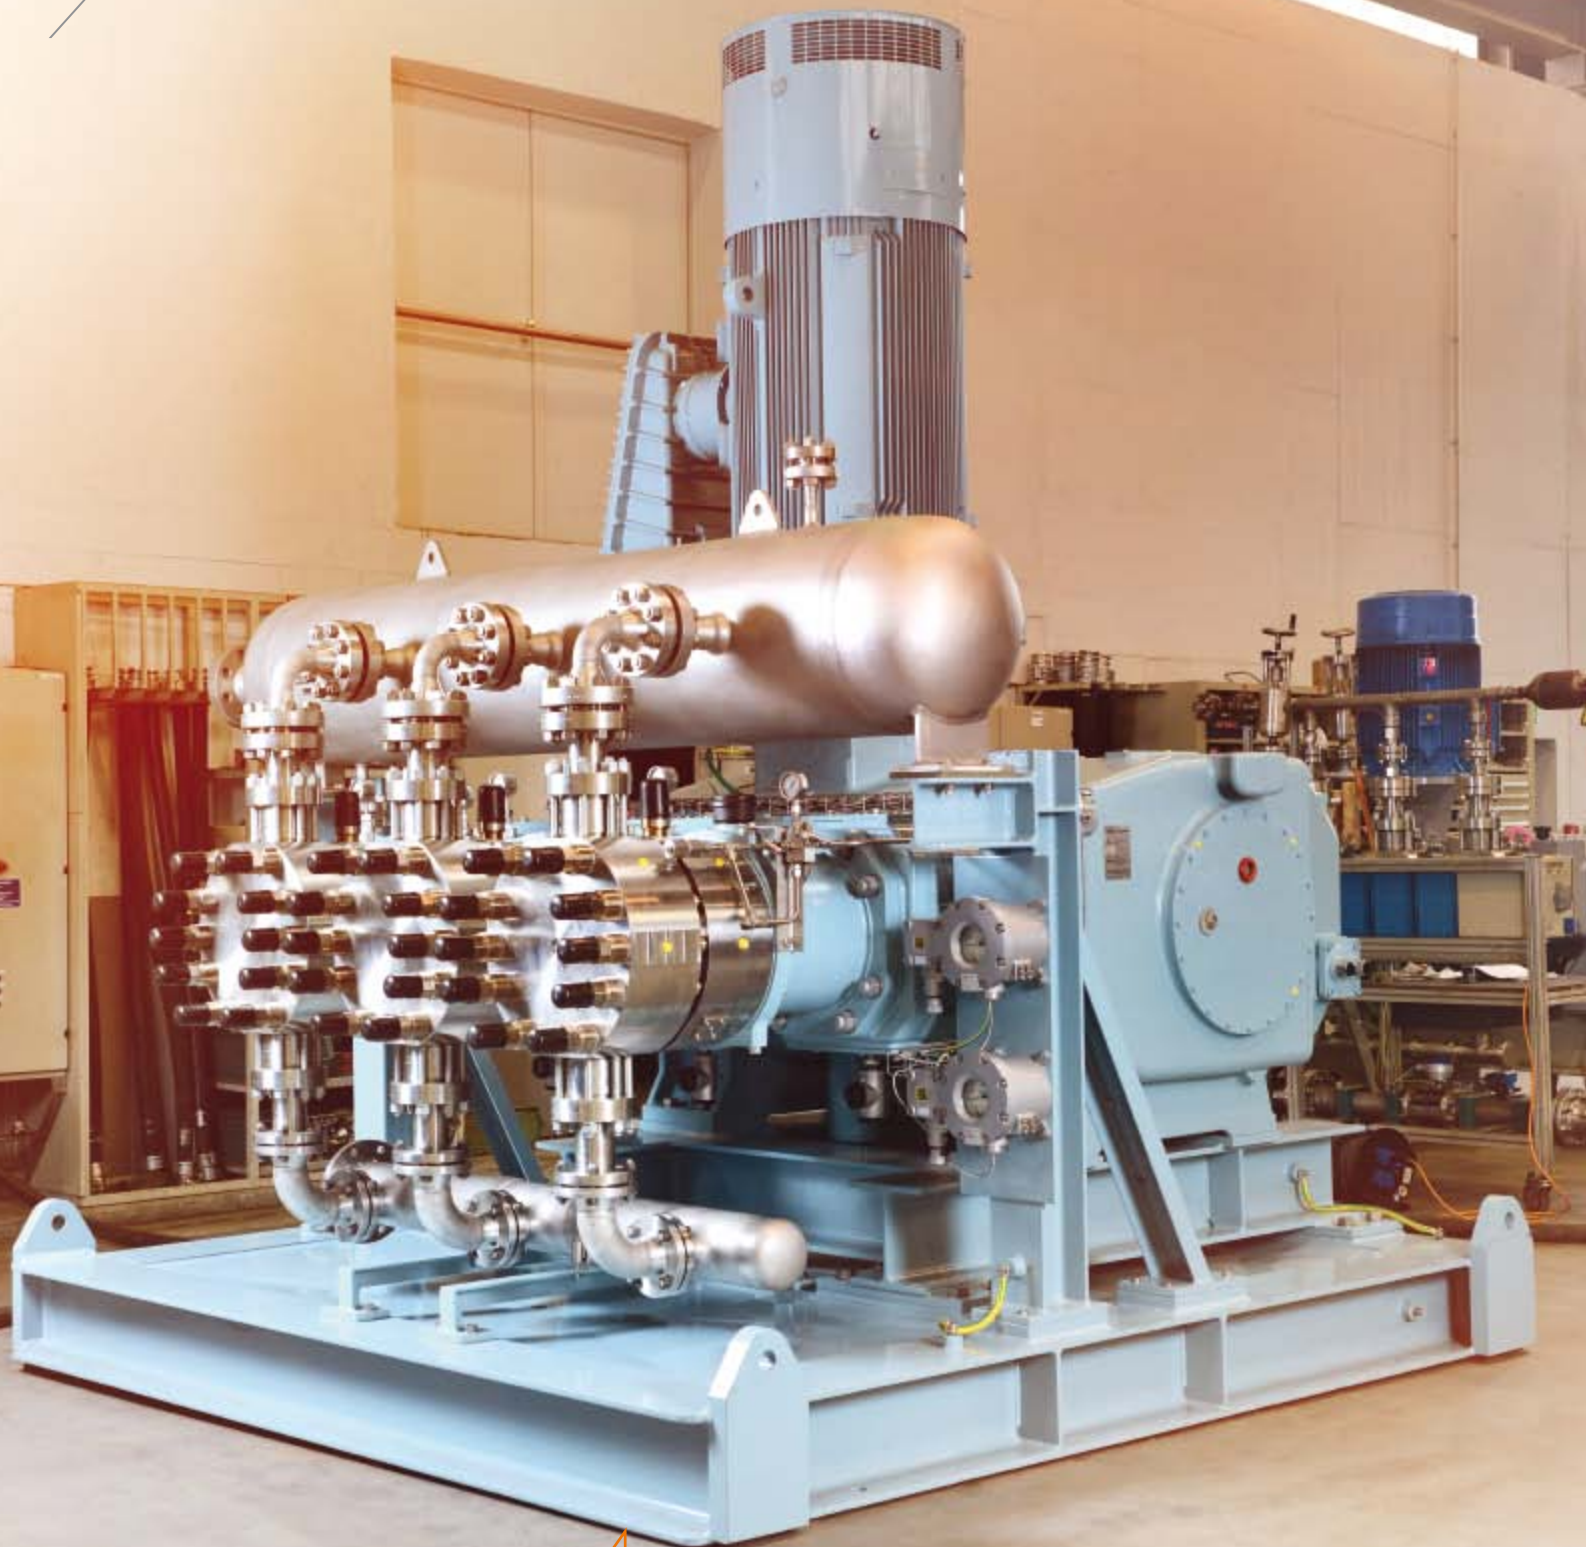

**Industry:** Chemicals

**Installation location:** Japan

**Application:** Wet oxidation for process wastewater,  
flow rate of 4,755 gph at a pressure of 2,320 psig

**LEWA solution:**

- LEWA triplex process diaphragm pump with a compact monoblock design
- Hermetically tight diaphragm pump heads made of 1.4404
- Including pipe resonator and drip pan
- Technical design in accordance with API 675 and local guidelines






**Industry:** Chemicals

**Installation location:** China

**Application:** Adding catalysts in high-pressure synthesis. flow rate of 5,283 gph at a pressure of 4,010 psig

**LEWA solution:**

- LEWA triplex process diaphragm pump with a compact monoblock design
- Hermetically tight diaphragm pump heads
- Very heavy-duty equipment for a continuous production process

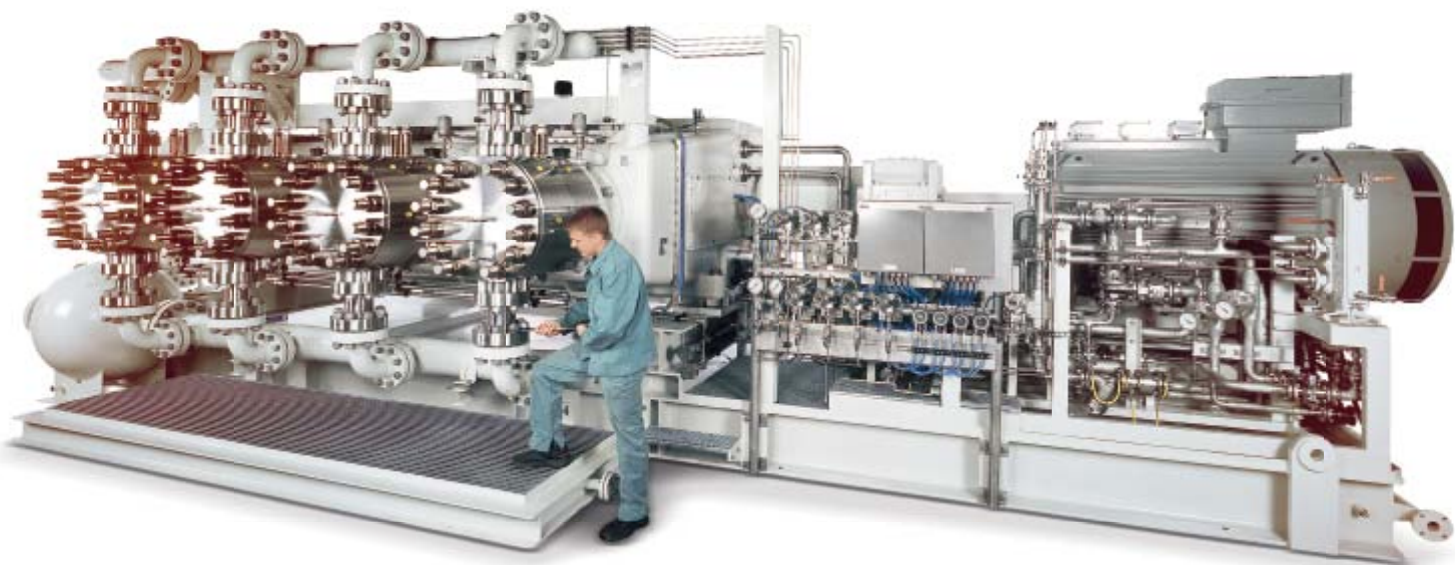

**Industry:** Oil & Gas

**Installation location:** Norway

**Application:** Injection of hydrogen sulfide/ carbon dioxide, flow rate of 26,417 gph at a pressure of 3,110 psig

**LEWA solution:**

- Largest process diaphragm pump in the world (136,685 lbs)
- Two quadruplex process diaphragm pumps, which can alternate as a stand-by pump
- Ball resonators for pulsation damping
- Hermetically tight pump
- Insensitive to dry running or particles in CO<sub>2</sub>
- High efficiency over a wide operating range



**Industry:** Petrochemicals

**Installation location:** China

**Application:** Metering ethylene oxide, flow rate of 1,347 gph at a pressure of 1,550 psig and a temperature of 41.0°F

**LEWA solution:**

- LEWA triplex process diaphragm pump with a compact monoblock design
- Hermetically tight diaphragm pump heads
- Valves and pump heads made of special material for an outstanding long service life





## Examples of customized process diaphragm pumps



**Industry:** Petrochemicals

**Installation location:** Germany

**Application:** Metering the melt when filling the high-pressure reactor, flow rate of 607.6 gph at a pressure of 3,620 psig

**LEWA solution:**

- LEWA triplex process diaphragm pump with a compact monoblock design
- Hermetically tight diaphragm pump heads
- Wetted parts are heated with steam
- Pump synchronization of both process pumps for maximum availability



**Industry:** Refineries

**Installation location:** Germany

**Application:** Conveying washing water with  $H_2S$ , flow rate of 2,113 gph with a pressure of 2,810 psig

**LEWA solution:**

- LEWA triplex process diaphragm pump with a compact design
- Design in accordance with API 675
- Reliable, hermetically tight pump with long service life, suitable for critical fluids







**Industry:** Petrochemicals

**Installation location:** Germany

**Application:** Production of biofuels,  
flow rate of 1,849 gph at a pressure of 1,300 psig and 501.8°F

**LEWA solution:**

- LEWA triplex process diaphragm pump with metal diaphragm
- Remote head design for metering extremely hot fluids
- Particularly high hydraulic output with hermetically tight pump
- Very long service life







**Industry:** Food & Beverages

**Installation location:** Switzerland

**Application:** Homogenizing special milk for maximum food safety at a pressure of 7,250 psig


**LEWA solution:**

- Complete homogenizer with LEWA triplex diaphragm pump in hygienic design
- With a two-stage homogenization valve (1160/7,250 psig)
- Water-cooled synchronous torque motor
- Hygienic and aseptic design, with FDA approval and in accordance with EHEDG
- CIP and SIP-capable
- Wetted parts in stainless steel, surface roughness  $Ra < 0.8 \mu m$ , mechanically polished




# High performance with minimum footprint: Drive units


LEWA process diaphragm pumps are available in the compact  
LEWA triplex series and in the LEWA ecoflow modular construction.

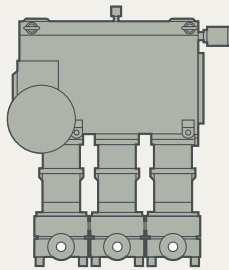


LEWA triplex up to G3R: Monoblock design with integrated gear

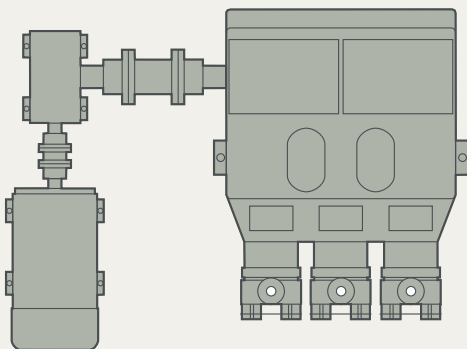

LEWA triplex G3U and G3T with external gear

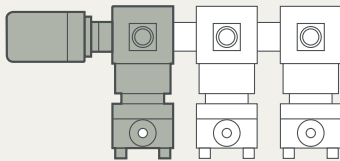


LEWA ecoflow with modular construction

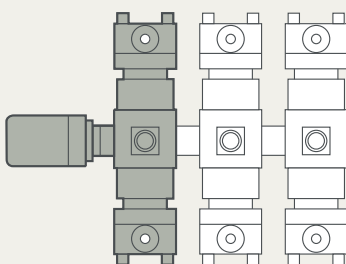

LEWA ecoflow in boxer design




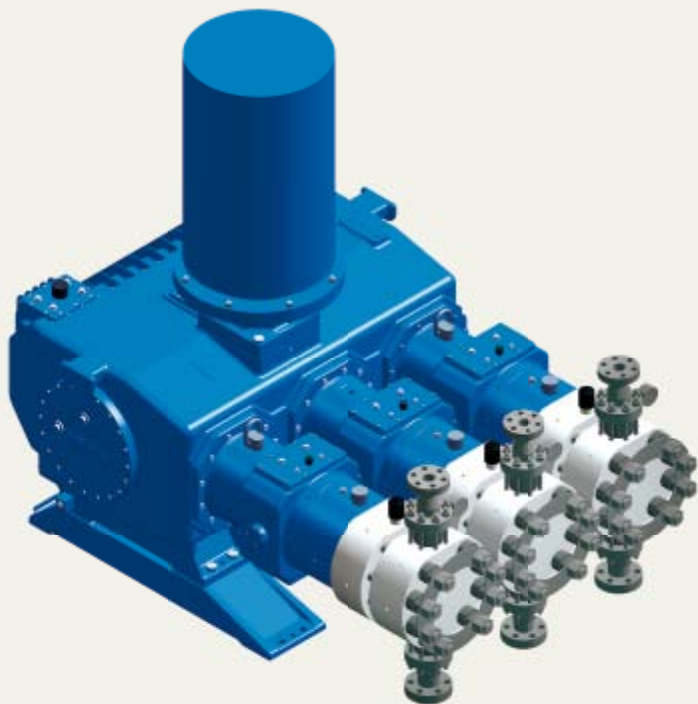

### LEWA triplex

LEWA triplex drive units are designed with a compact monoblock design. It offers the following advantages:

- Extremely space-saving and weight-saving
- Solid, rugged overall design
- Very smooth running plus low-vibration operation thanks to even eccentric offset
- Sturdy slide bushings for eccentric shaft and plunger rod drive pin
- Integrated worm gear and vertical flange motor (up to G3R size)
- No base frame required (up to G3R size)
- Low-pulsation design thanks to overlapping partial flows
- Precise, reproducible flow setting using motor speed for adjustment

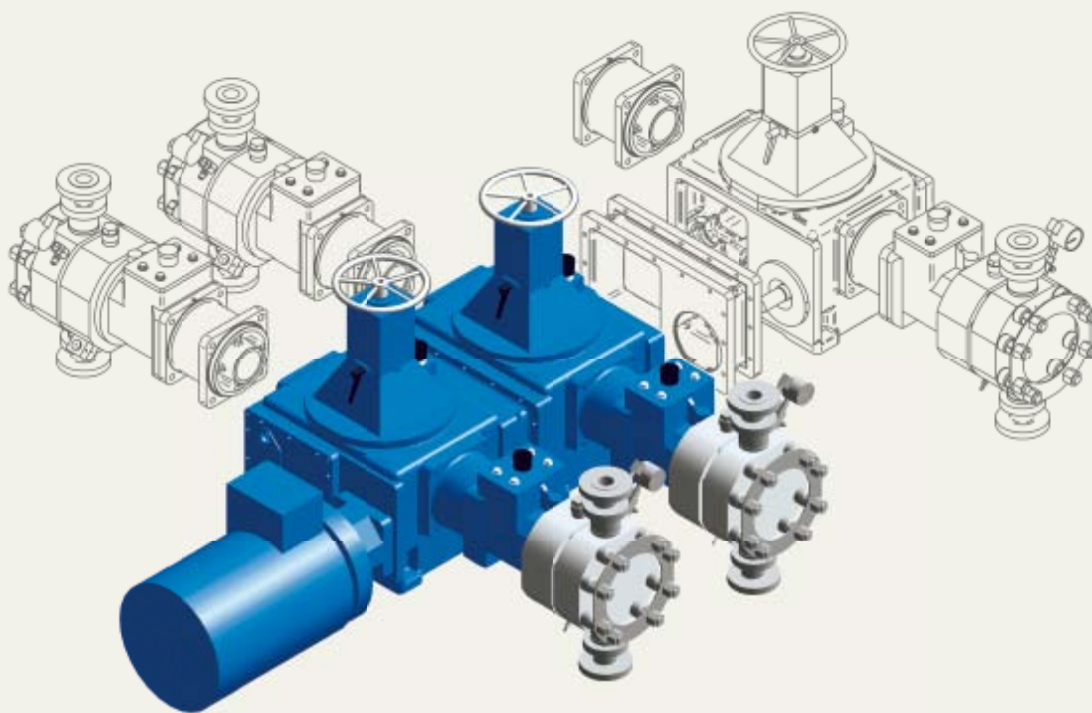

### LEWA ecoflow

This highly flexible range, featuring a modular construction, makes it possible to cater to a whole variety of customer requirements. It offers the following advantages:

- Designed specifically for mixture control and highly variable flow rates
- Wide control range up to 1:100
- Precise, reproducible flow setting using stroke length and rotational speed
- For conveying processes combined with metering tasks
- Multiple individual elements, even with different sizes, can be combined
- Duplex, triplex, quadruplex, or sextuplex pumps in boxer design (LDG and LDHB)
- Solid overall design

# For compactness and safety. The LEWA triplex technology.

**LEWA triplex is a hydraulically actuated process diaphragm pump. The design principle ensures that the diaphragm of the pump head always works in the defined range.**

Diaphragm pumps are used when leak tightness, operational reliability and safety are demanded. Especially for fluids that are hazardous, abrasive, environmentally harmful, or sensitive. To keep the load on the diaphragm as low as possible, it is hydraulically actuated in the LEWA triplex.

## Minimum dead space

Pump head design with high-performance diaphragm optimized to minimize dead space

## Pressure relief valve

A pressure relief valve in the hydraulic part of the pump prevents any overload occurring in the pump. It is individually adjustable. (Type-tested version also available)

## The right material for every application


Materials are selected in collaboration with the customer and with the fluid properties taken into account.

## Low-wear valves for a variety of tasks


Operational reliability and service life are decisively dependent on valve quality. The valve design is therefore adapted to the specific application.

## Highly precise hydraulic control

The hydraulic valve ensures stable, precise operating conditions.

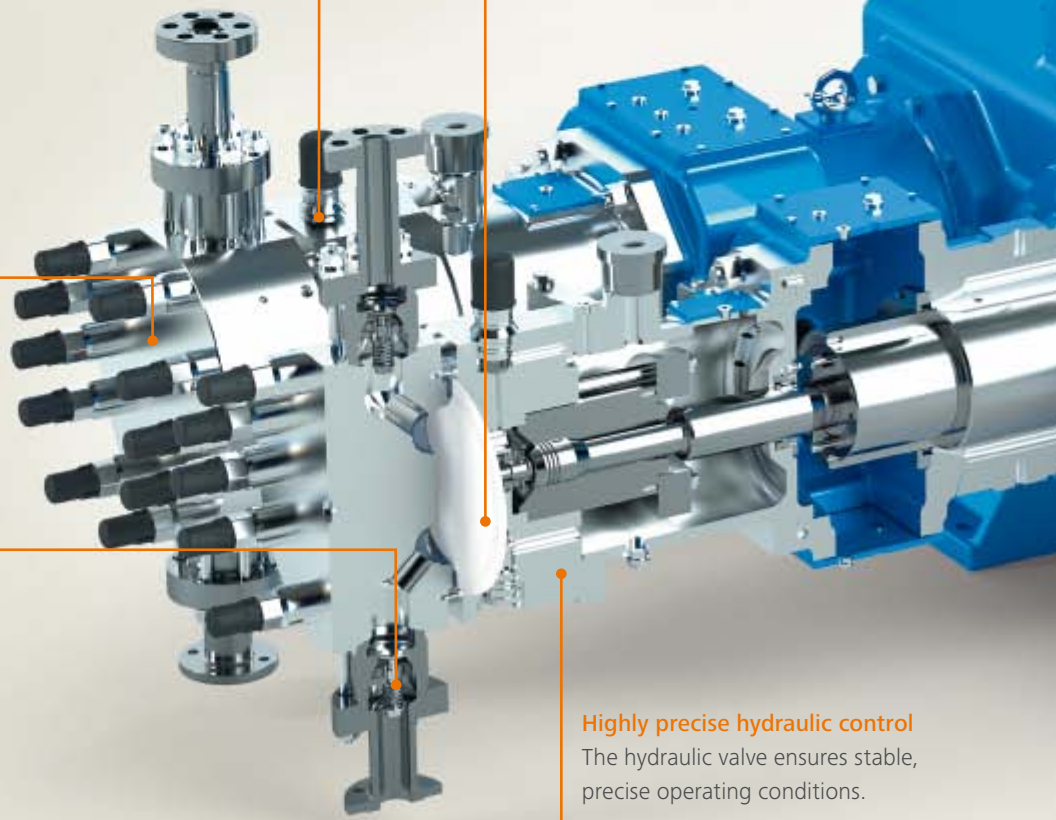



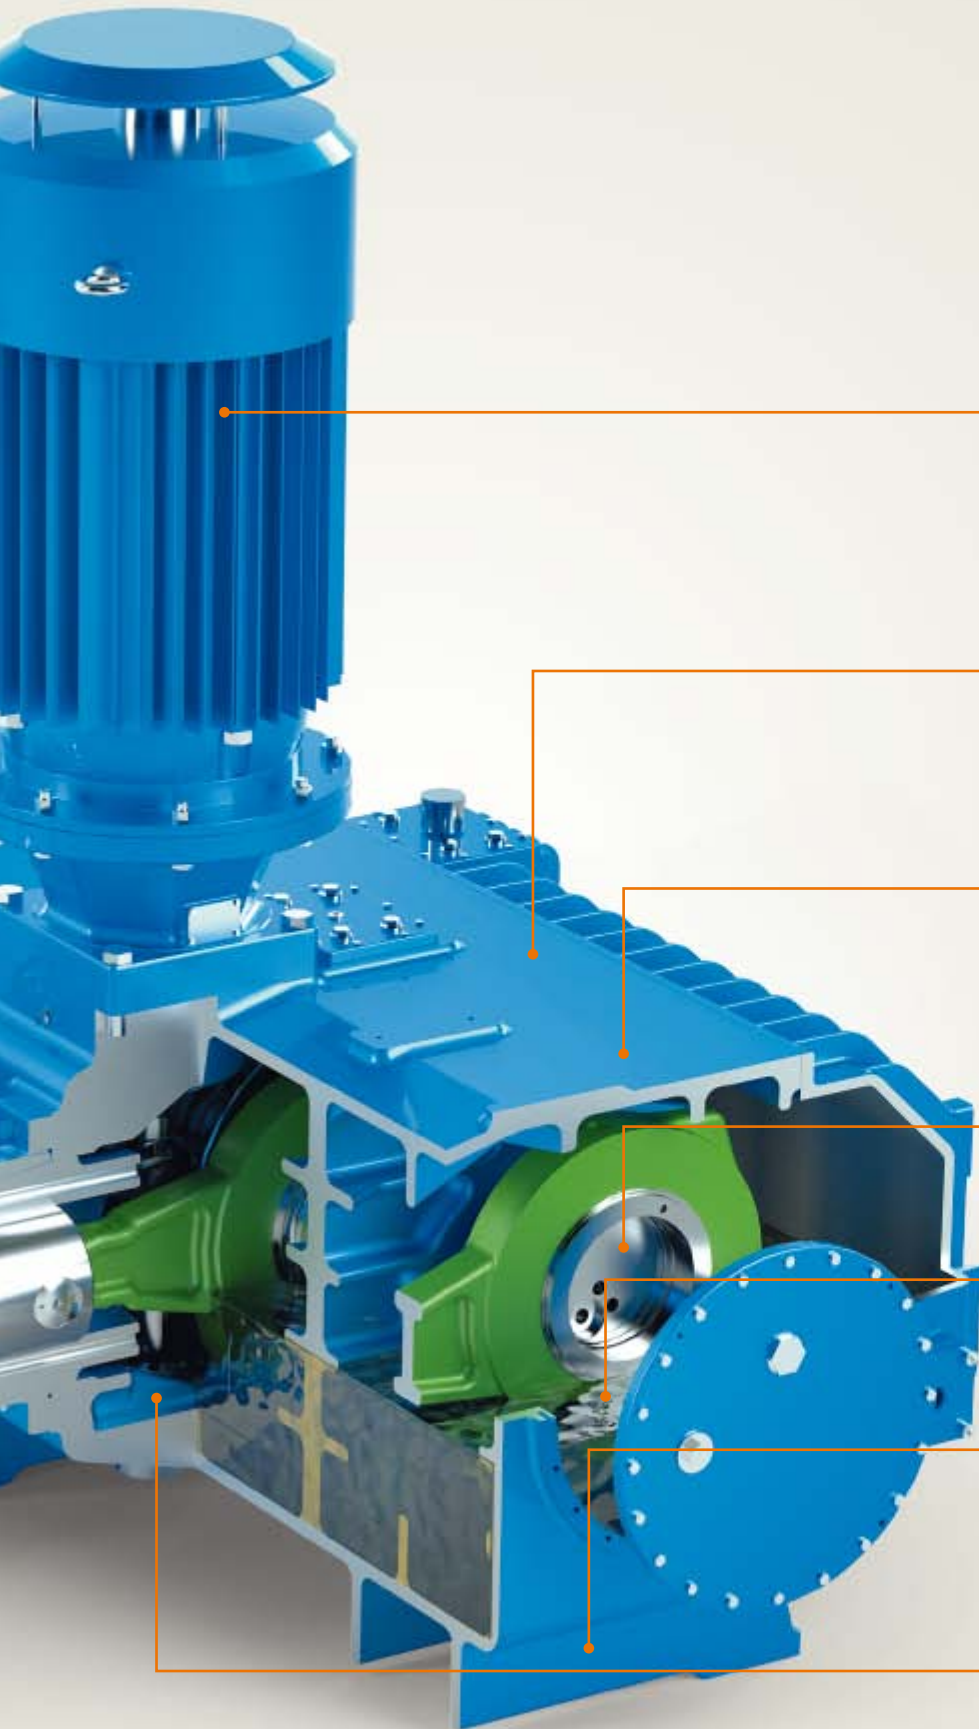

**High-performance drives  
for continuous operation**

Frequency-controlled 3-phase  
motors for low and medium voltage.  
Special solutions available.

**Overall design for  
low-vibration operation**

This avoids the use of shock absorber

**Monitoring**

the temperature of the drive unit oil

**Solid crank shaft**

for maximum hydraulic output

**Lubrication**

All moving parts run with  
immersion splash lubrication

**Low space requirement**

Compact foundation dimensions  
thanks to vertical motor installation

**Multi-chamber system**

for separating hydraulic and  
drive unit oil

For a wide variety of requirements.  
The LEWA pump heads.



Series

# M900

**The universal choice for fluids of any kind**

Innovative diaphragm pump head is the latest generation for maximum operational reliability. The patented LEWA DPS technology also enables a suction capacity that is globally unique in the field of hydraulically actuated diaphragm pumps.



Series

# M800

**The compact choice for highest pressures**

The special geometry of the diaphragm clamping system enables the use of PTFE diaphragms for pressure ranges up to 14,500 psig resulting in a very compact design.





Series

## M500

**The proven choice for high flow rates**

Universal diaphragm pump head for high flows. Proven, durable, reliable, and with patented diaphragm position control.



Series

## M400

**The extreme choice for high temperatures**


M400 pump heads have a metal diaphragm and are designed for high temperatures and pressures up to 17,400 psig. Also suitable when a high degree of permeation resistance is required.

# For fluids of any kind.

## Universal M900 diaphragm pump heads.

The innovative M900 pump head is the latest generation of pump head, with PTFE sandwich diaphragm for maximum operational reliability.

As a further development to the M500 series, it is just as durable and proven, however has more safety reserves, especially when starting the pump. The patented DPS technology also enables a suction lift capability that is globally unique in the field of hydraulically actuated diaphragm pumps.

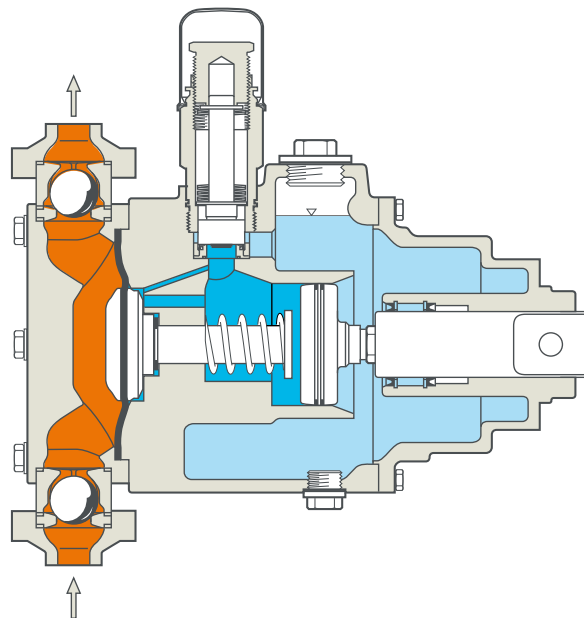

### Technical data

Discharge pressure up to 7,250 psig

Flow rate up to 1,585 gph per pump head

Temperatures of -4.0 to +302.0°F

Viscosity up to 100,000 cP

316/316L, special materials

Can be installed on all ecoflow drive units  
and all triplex drive units ≤ G3G

### Outstanding advantages

Globally unique suction lift capability

Suitable for vacuum extraction

Simple, reliable start-up,  
even under extreme conditions

Patented DPS diaphragm protection system

Very low maintenance costs and long  
service intervals

Insensitive to particles in the fluid

Dry run safe


Integrated pressure relief valve



## For highest pressures. Compact M800 diaphragm pump heads.

The M800 pump head is a diaphragm pump head with PTFE sandwich diaphragm.

The special geometry of the diaphragm clamping system enables the use of PTFE diaphragms for pressure ranges up to 14,500 psig and resulting in a compact design. Very economical solution in the range of high pressures, especially in comparison to pump heads with metal diaphragms.

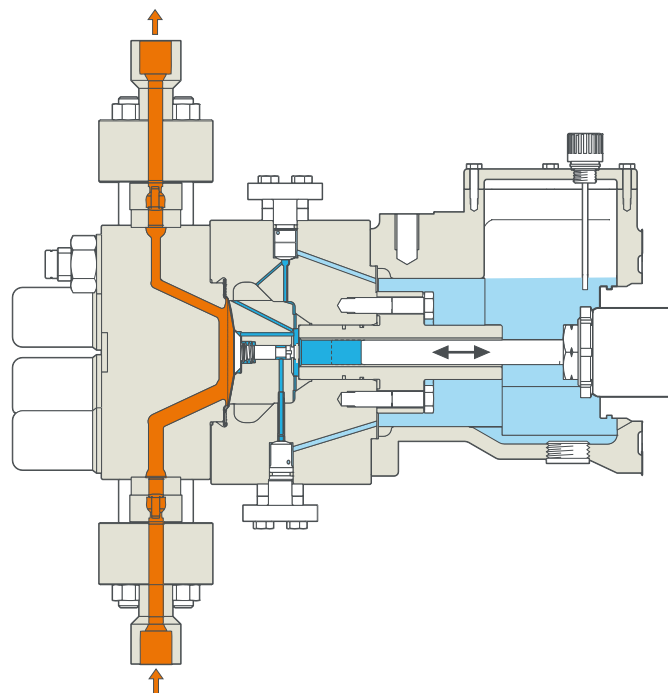

### Technical data

Discharge pressure up to 14,500 psig

Flow rate up to 290.6 gph per pump head

Temperatures of +14.0 to +140.0°F

Viscosity up to 100,000 cP

1.4313 or 1.4462 (Duplex)

Can be installed on all ecoflow drive units  $\geq$  LDF and all triplex drive units

### Outstanding advantages

Extremely high operating pressures possible

Compact design and smallest possible use of materials by using PTFE diaphragms even in the high-pressure range (and so having smaller outer diameters in comparison with metal diaphragm pump heads)

Insensitive to particles in the fluid


Dry run safe

Integrated pressure relief valve

## For high flow rates. Proven M500 diaphragm pump heads.

The M500 diaphragm pump head with PTFE sandwich diaphragm is universally applicable. It is perfect for high flow rates.

The M500 has been in successful use for decades. Its advantages are robustness, reliability, and its patented diaphragm position control.

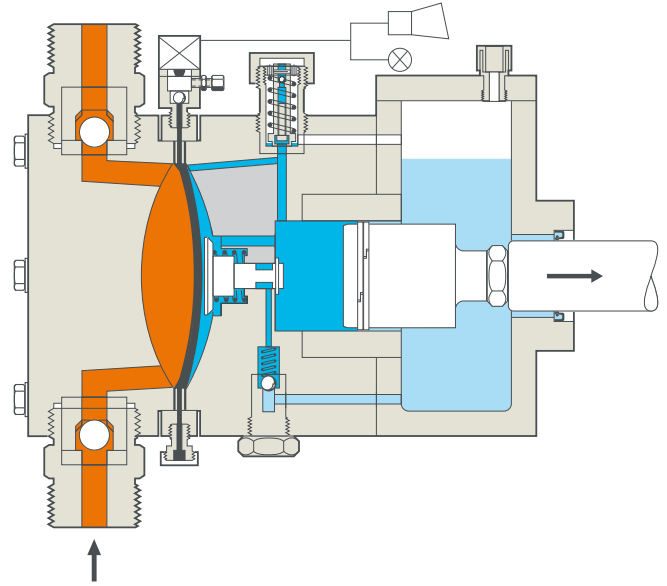

### Technical data

Discharge pressure up to 5,070 psig

Flow rate up to 5,019 gph per pump head

Temperatures of -58.0 to +302.0°F

Viscosity up to 100,000 cP

316/316L, plastics PVC or PVDF, special materials

Can be installed on all ecoflow drive units  $\geq$  LDE and all triplex drive units

### Outstanding advantages

High suction capacity due to diaphragm position control

Very low maintenance costs and long service intervals

Suitable for high flow rates

Insensitive to particles in the fluid

Dry run safe


Integrated pressure relief valve



## For high temperatures. M400 diaphragm pump heads for extreme requirements.

The M400 pump head with metal diaphragm is selected for highest pressures and temperatures. It is also suitable when a high degree of permeation resistance is required.

The diaphragm is working between two contour plates, limiting the deflection of the diaphragm and providing an extreme level of operational reliability. The diaphragm monitoring system offers a plus for safety by immediately displaying the damage of a diaphragm layer.

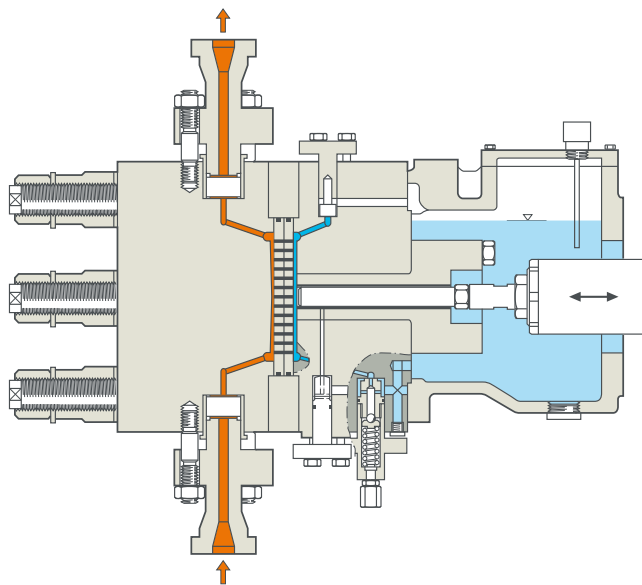

### Technical data

Discharge pressure up to 17,400 psig

Flow rate up to 211.3 gph per pump head

Temperatures of -40.0 to +392.0°F

Viscosity up to 500 cP

1.4313, 316/316L, special materials

The M400 can be installed on all ecoflow drive units  
 $\geq$  LDF and all triplex drive units  $\leq$  G3G

### Outstanding advantages

Extremely high operating pressures possible

Extremely high operating temperatures possible

Diffusion-tight metal diaphragm

Dry run safe

Integrated pressure relief valve

# For the optimum configuration. Overview options.

## Instrumentation, control, and monitoring

---

Integration of the pump into the process control systems for control, regulation, and condition monitoring

Diagnostic connection for the online readout of measurement data from the pump head and drive

Diaphragm monitoring systems to spec with pressure switches, manometers, contact manometers, and pressure transmitters

Pump synchronization

Converter and control cabinets

On-site control panel

## Pump head designs

---

Special materials by customer request, such as Hastelloy, duplex, titanium, plastics

Diverse connection geometries

CIP and SIP capability

Hygienic design

Heating and cooling jacket

Fully heated pump heads (including valves) for melting

Remote head design for extreme temperatures

## Accessories

---

Pulsation damper

Safety valve

Pressure retention valve

Flow meter

Base plate

Collecting pipe





**Industry:** Energy utilities

**Installation location:** Germany


**Application:** Compressing liquefied gases with diaphragm pump skid, flow rate of 634.0 gph at a pressure of 899 psig

**LEWA solution:**

- Engineering, assembly, and commissioning from a single source
- Process diaphragm pump complies with stringent safety requirements
- Designed for low inlet pressure levels
- Enables compression in a single stage
- High energy efficiency

# At a glance. Technical data.

## Performance overview of LEWA ecoflow and LEWA triplex process diaphragm pumps

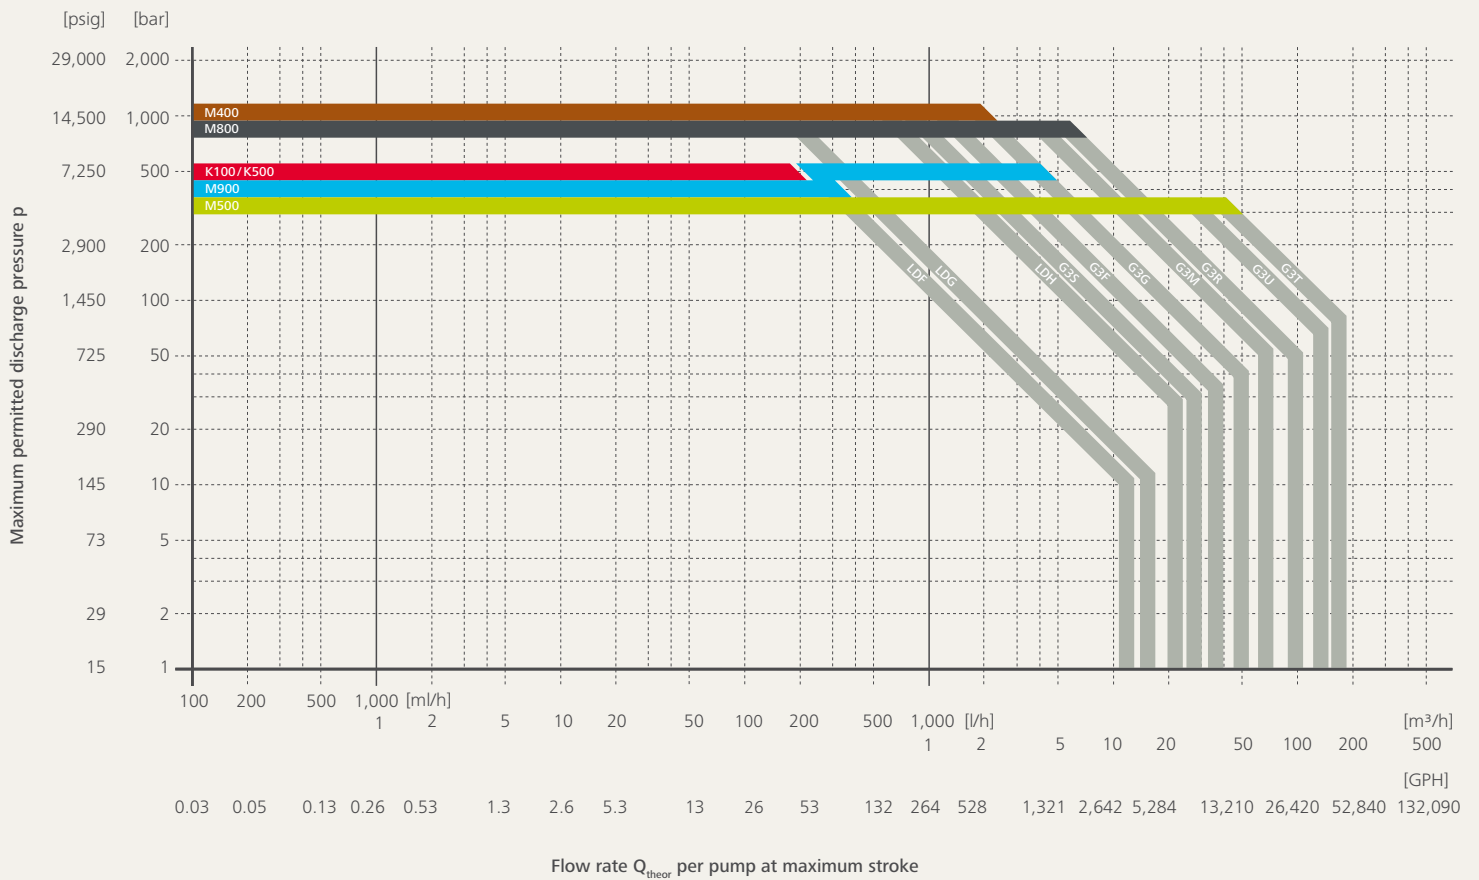

Performance overview to determine drive unit size.  
The characteristics apply to a single pump.


Technical data for pump heads

	Pump head M900	Pump head M800	Pump head M500	Pump head M400
Max. discharge pressure [in psig]	7,250	14,500	5,070	17,400
Max. flow rate [in gph]	1,585	290.6	5,019	211.3
Temperatures [in °F]	-4.0/+302.0	+14.0/+140.0	-58.0/+302.0	-40.0/+392.0
Max. viscosity [in cP]	100,000	100,000	100,000	500
Applicable	on all ecoflow drive units and all triplex drive units ≤ G3G	on all ecoflow drive units ≥ LDF and all triplex drive units	on all ecoflow drive units ≥ LDE and all triplex drive units	on all ecoflow drive units ≥ LDF and all triplex drive units ≤ G3G

Assembly dimensions


in inch	Type G3S	Type G3F	Type G3G	Type G3M	Type G3R
L	51.18	61.02	86.61	90.55	116.14
W	45.28	51.18	68.90	74.80	80.71
H	53.15	72.83	76.77	124.02	153.54

The dimensional specifications differ depending on the pump head installed.

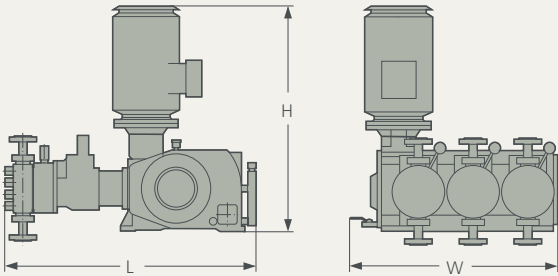


in inch	Type G3U	Type G3T
L	129.92	141.73
W	175.20	194.88
H	53.15	86.61

The dimensional specifications differ depending on the pump head installed.

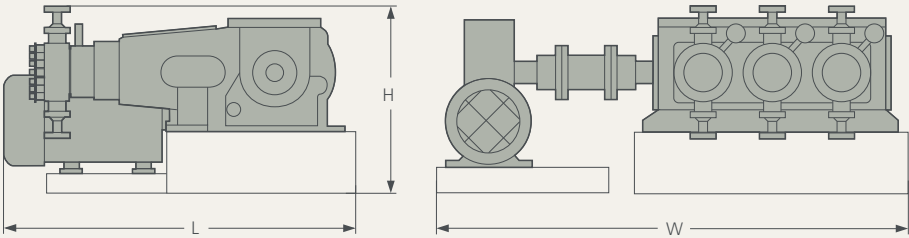

in inch	Type LDF	Type LDG	Type LDH
L	44.49	51.18	82.68
W	35.43	51.18	70.87
ΔW	16.93	19.29	28.23
H	37.01	39.37	59.06

The dimensional specifications differ depending on the pump head installed.

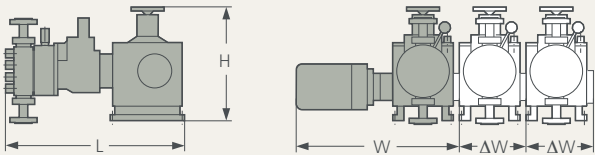




# Complete solutions from a single source. LEWA packages and systems.

LEWA also offers solutions that go beyond individual process or metering pumps. For decades, we have built customer-specific systems, skids, and packages. Our services range from engineering to commissioning – including custom system controllers, process visualization, operational data collection, and external interfaces to the process control system.


We guarantee the optimum implementation of your requirements with our knowledge of intelligent process control and the controller and regulation technology needed to achieve it.

The basis is the competent selection and combination of system components and their characteristics. As our basic component, we prefer to use LEWA ecoflow metering diaphragm pumps.

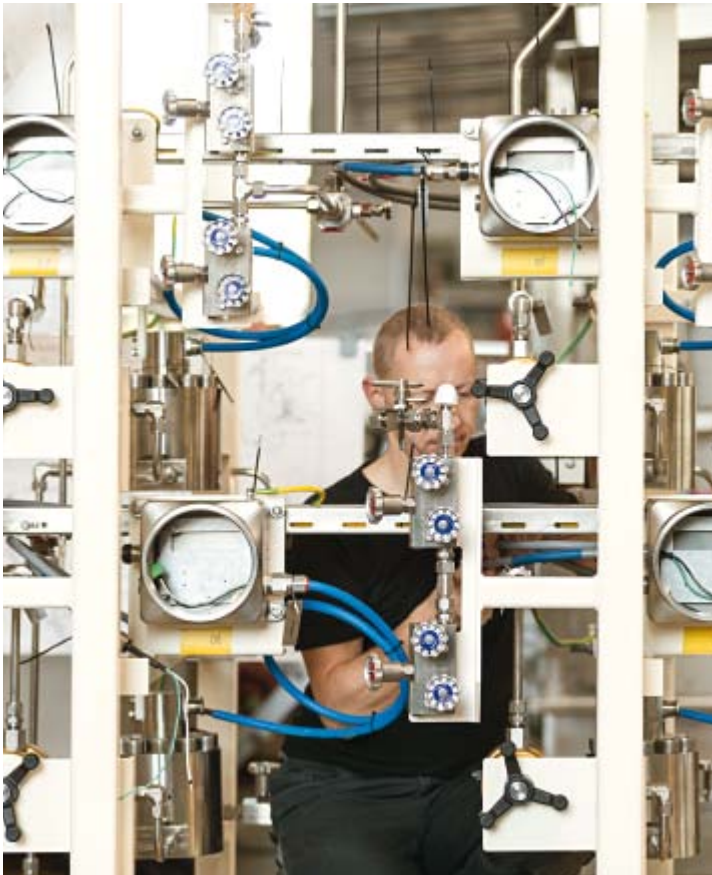

Each process has specific requirements. LEWA's experts tailor all components carefully to each other and bring in valuable industry know-how.



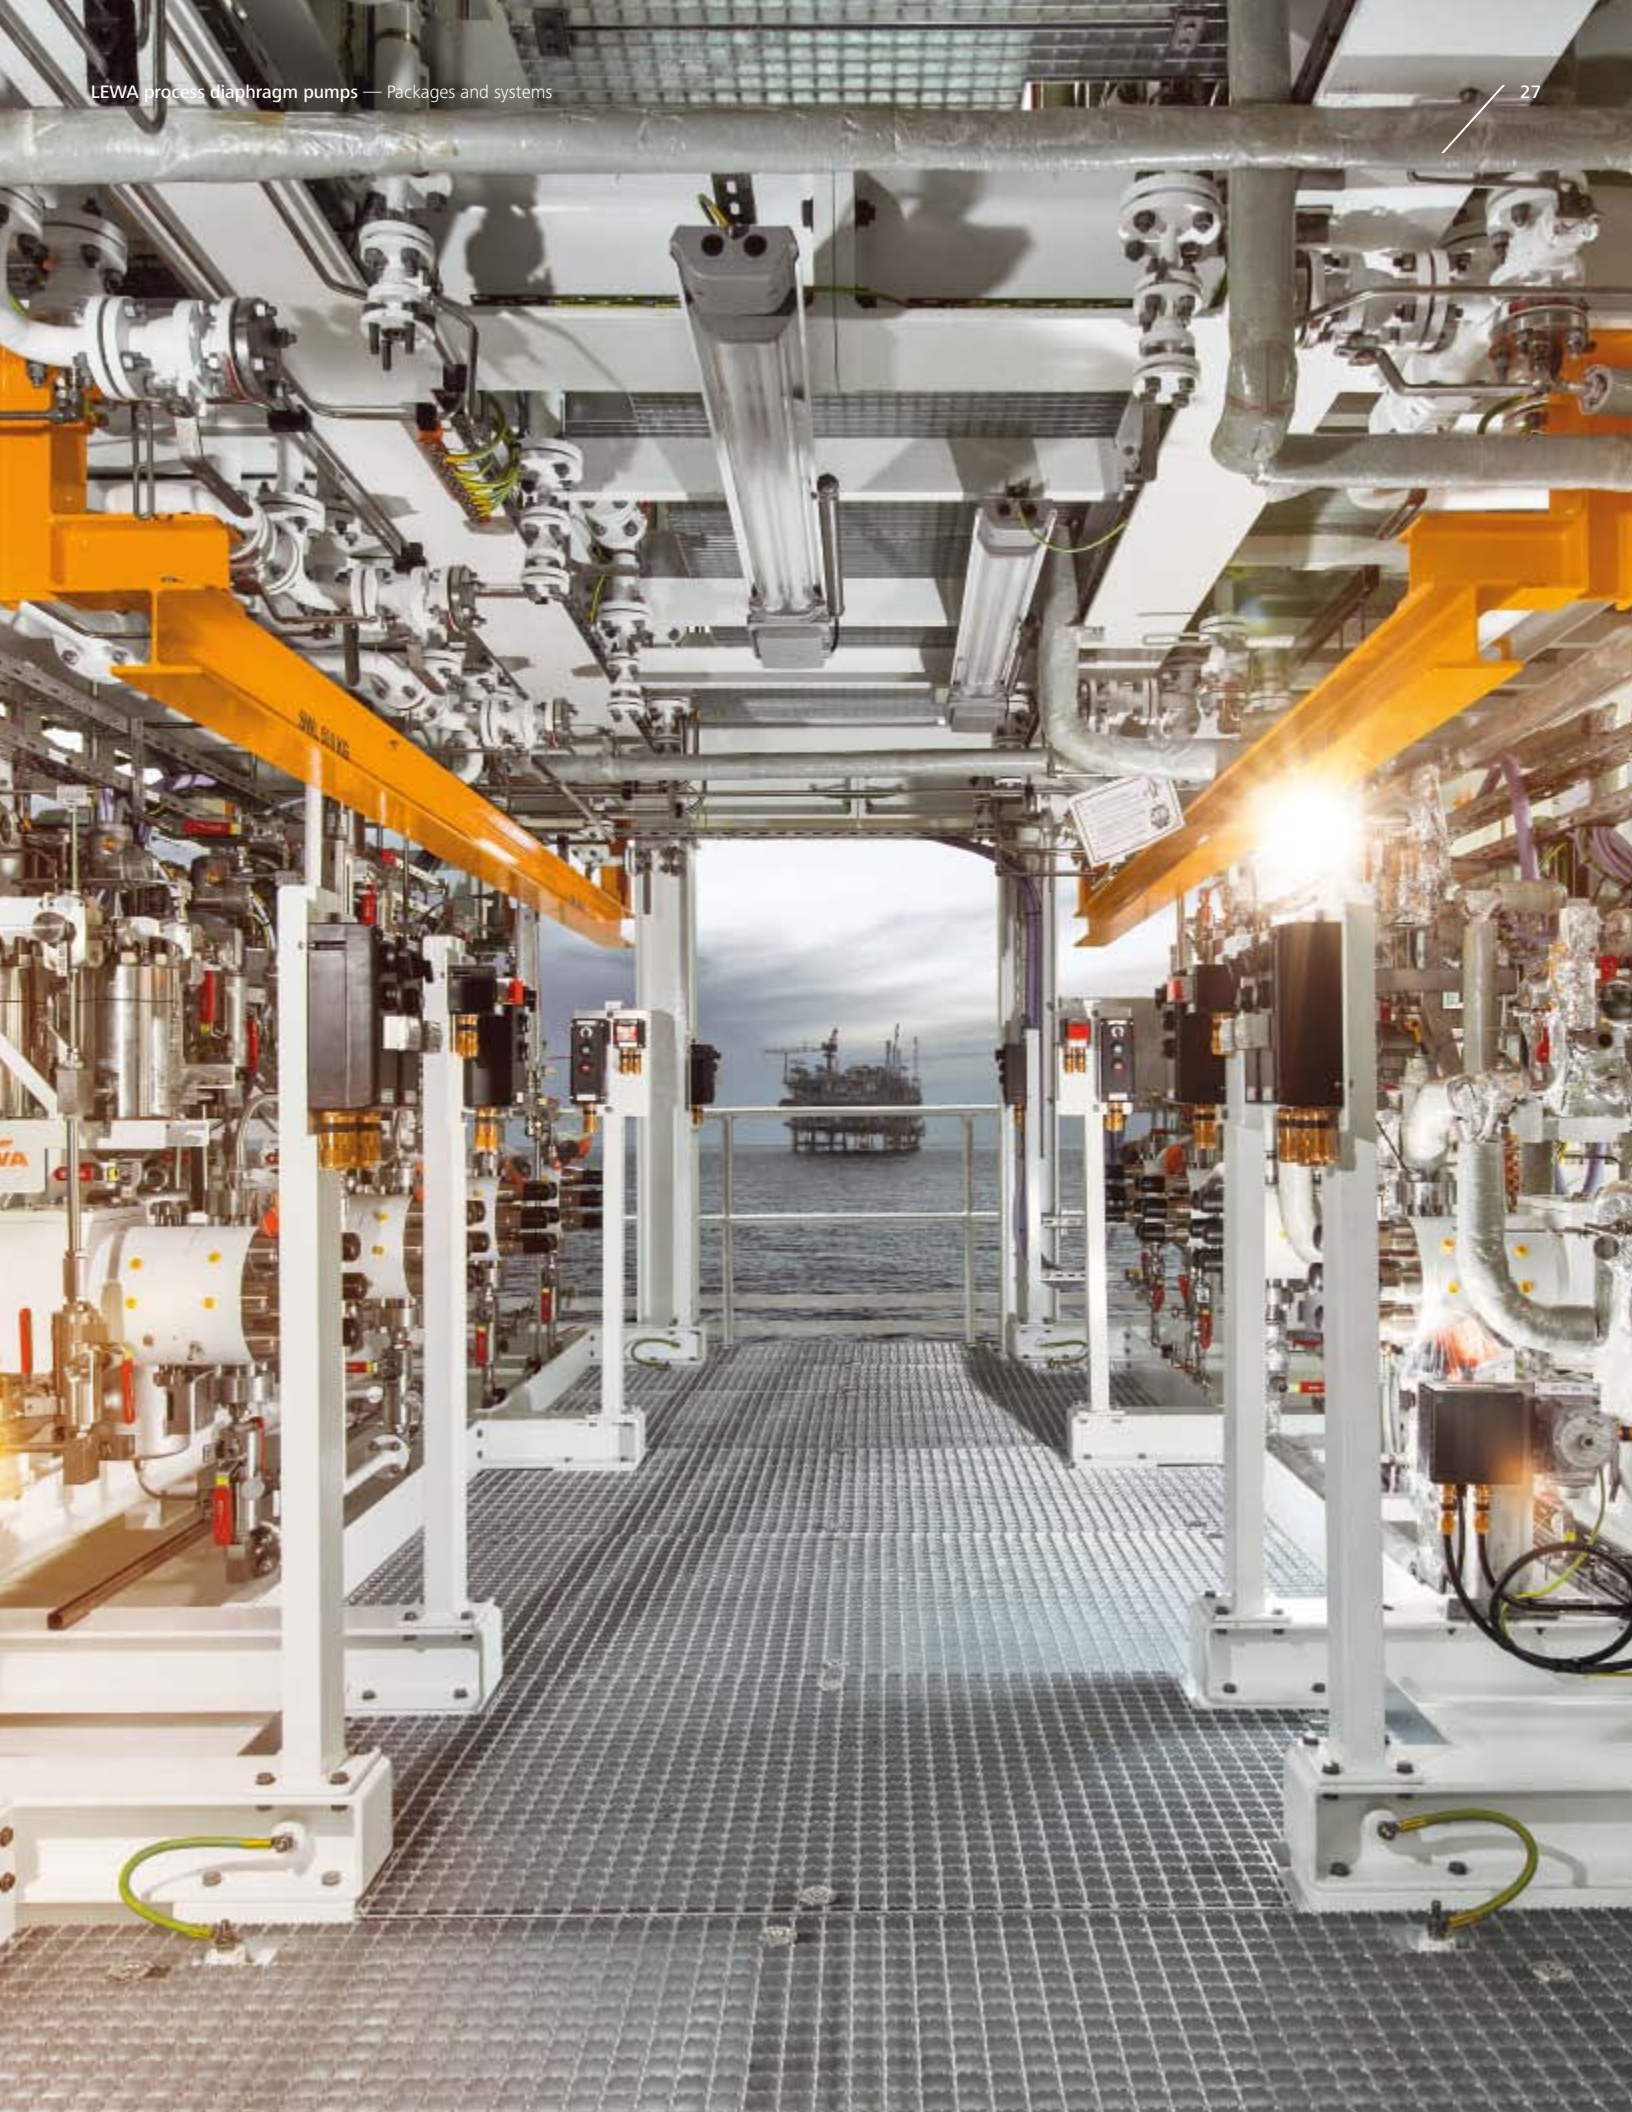




# Creating Fluid Solutions. For more value created.




Technical consulting

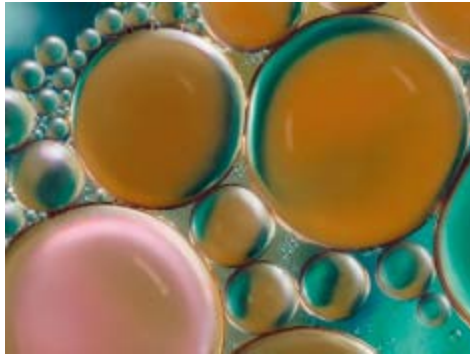


Fluid and process  
engineering tests



Lifecycle concepts and  
energy optimization

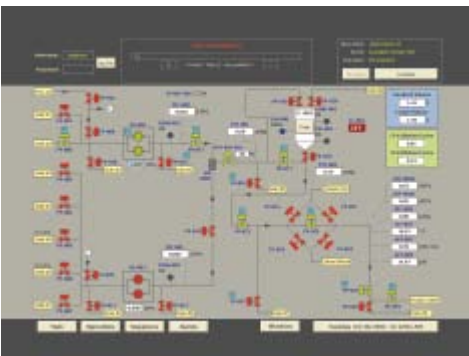

Process automation

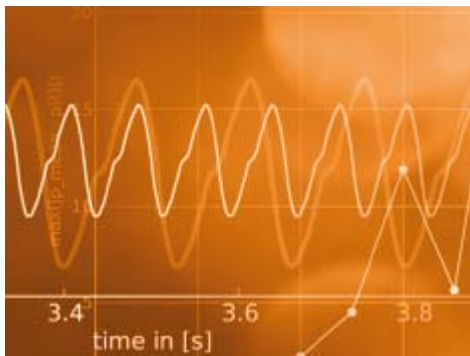

Pulsation studies and  
pipeline calculations



System layout and integration



Creative development  
and refinements



Commissioning and  
maintenance service



Spare part and service concepts



## Creating Fluid Solutions.

Driven by our commitment, our trendsetting products and innovative technologies have set benchmarks for diaphragm pumps and metering systems for over 60 years. We solve complex tasks from a single source. That ranges from custom pump design, basic and system engineering, global project management, and pretesting to commissioning and maintenance on site. Our consistent drive always to develop the best solutions for the customer provides you with a competitive advantage and visible added value.

**LEWA-Nikkiso America, Inc.**

132 Hopping Brook Road  
Holliston, MA 01746, USA  
Phone: +1 508 429-7403  
Fax: +1 508 429-8615

**LEWA-Nikkiso America, Inc.**

**Gulf Coast Sales & Service Center**  
2446 Greens Road  
Houston, TX 77032, USA  
Phone: +1 713 577-5392  
Fax: +1 713 577-5393

[sales@lewa-inc.com](mailto:sales@lewa-inc.com)  
[www.lewa-inc.com](http://www.lewa-inc.com)

Your local representative:

